

DRIFTER

ANALOG TREMOLO

LED indicator light

Off: Bypass

Green: effect on

Green+Red: Toggle function

Red: saved preset mode

Rate (A)

Main function – Determines frequency

Secondary function – *secret **TIME** mode

Shape (B) (Waveform)

Seven different types of wave behavior
influenced by **Rate**

Shapes:


- 1) triangular
- 2) square
- 3) sawtooth
- 4) sine
- 5) reverse sawtooth
- 6) pulse
- 7) random

*Secret **TIME** mode:

when **Off** press **Footswitch** for 2 sec. (LED **Off**)


Drift/Slide ramping-time will be set according to
current **Rate** knob position (0-10 seconds)

Power: 9V Regulated power supply 2.1mm
Negative center pin

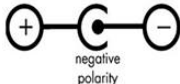

Relay true bypass

(A more reliable, more durable footswitch)

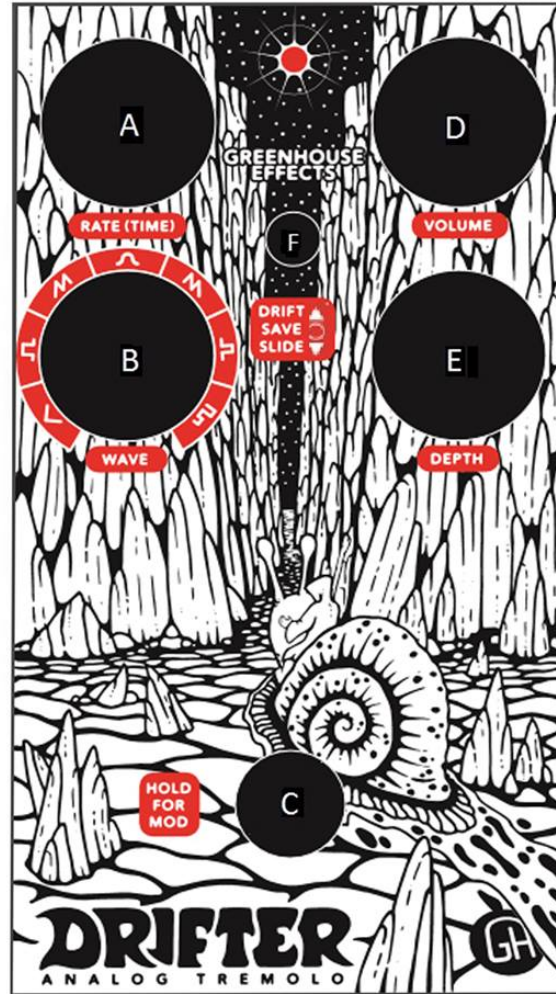

Footswitch

On/off - press and release

To activate **Drift/Save/Slide**:

When pedal is **on** - press and hold **footswitch**

Volume (D)

From zero through unity-gain to a slight boost

Depth (E)

Takes you as deep as you dare to go

Toggle (F)

3 work modes:

1) **Drift** ▲

(When **on**: press & hold **Footswitch**)

Increases **TREMOLO** speed

accelerating from current **Rate** knob position
and up to maximum speed

When **Drifting** the LED will morph (**Green+red** light)

2) **Save** ◻

(When **on**: press & hold **Footswitch**)

LED light will change from **Green** to **Red** indicating
that chosen preset is saved

To recall your saved preset - simply switch
Toggle to **Save** mode (LED: **Red**)

Exit preset: changing any knob will exit the
preset – LED is back to **Green**

3) **Slide** ▼

(When **on**: press & hold **Footswitch**)

increases **Depth** starting from current **Depth**
knob position and up to maximum depth

When **Sliding** the LED will morph (**Green+Red** light)

Blessings!

Thank you for purchasing
a genuine hand-crafted
Greenhouse Effect

**GREENHOUSE
EFFECTS**